



OPERATING THE ELECTRONIC DIGITAL SAFE

To program your Personal Identification Number ("PIN") – 3 to 8 DIGITS:

1. The safe door should be open on arrival.
2. Press the red button on the inside of the door near the hinges.
3. Now select your PIN digit and then press the letter "B" to confirm your PIN. A beep will sound for each key pressed. After the letter "B" is pressed, a green light goes on to indicate your success. Be sure to write down this code immediately, so you do not forget.

To Operate Safe:

1. To open the safe: Input your own PIN (i.e. the number you have selected) then press the letter "B". Turn handle clockwise and the safe will open.
2. After entering your PIN, you have 5 seconds to turn the knob before the mechanism relocks, if it relocks, please enter your PIN again. Don't forget to press the letter "B" after entering your PIN.

CAUTION: If you or an intruder uses the incorrect group of numbers, it will not open and a yellow light goes on. Entering an incorrect PIN 3 times will freeze the system for 20 seconds.

PLEASE CONTACT THE VILLA MANAGER IN CASE OF AN EMERGENCY