



Induction Hob

PRODUCT DESCRIPTION

Cooking surface layout

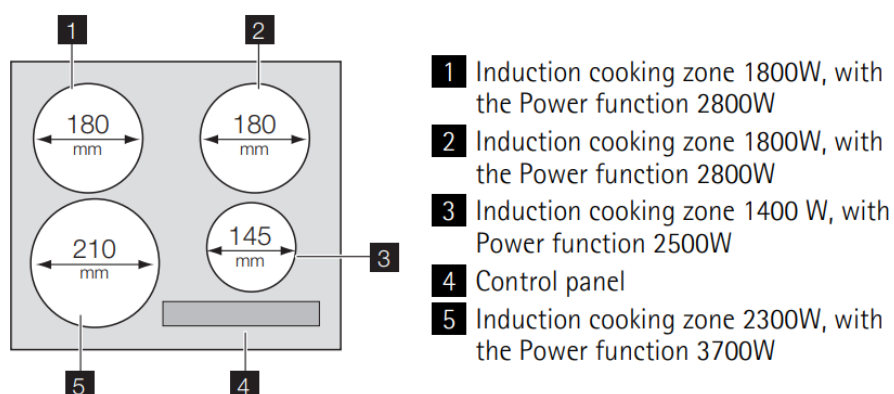

Control panel layout

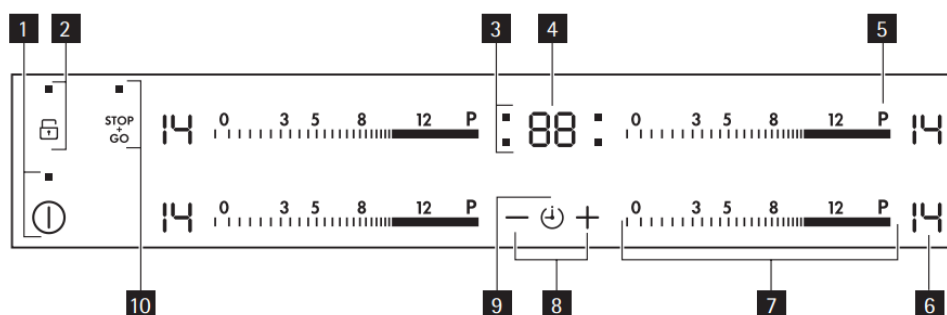

Use the sensor fields to operate the appliance.

	sensor field	function
1	ⓘ	starts and stops the hob
2	🔒 a lock with an indicator	starts and stops the key lock or child lock
3	cooking zones' indicators of timer	shows for which zone you set the time
4	the timer display	shows the time in minutes
5	P	starts the Power function

Induction Hob

	sensor field	function
6	a heat setting display	shows the heat setting
7	a control bar	to set the heat setting
8	+ / -	increases or decreases the time
9		selects the cooking zone
10	 with an indicator	starts and stops STOP+GO

Heat setting displays

Displays show which functions operate

Display	Description
	The cooking zone is off
 - 	The cooking zone operates
	Keep Warm
	The automatic heat-up function is on
	Power function is on
 + digit	There is a malfunction
 /  / 	OptiHeat Control (3 step Residual heat indicator): still cooking / keep warm / residual heat
	Lock/Child safety function is on
	Cookware unsuitable or too small or no cookware on the cooking zone
	The automatic switch off is on

OptiHeat Control (3 step Residual heat indicator)



WARNING!

   Risk of burns from residual heat!

OptiHeat Control indicates the level of the residual heat. The induction cooking zones make the heat necessary for cooking directly in the bottom of the cookware. The glass ceramic is slightly heated by the residual heat of the cookware.

OPERATING INSTRUCTIONS



Use the induction cooking zones with suitable cookware.

On and Off

Touch  for 1 second to start or stop the appliance.

Induction Hob

Automatic Switch Off

The function stops the hob automatically if:


- all cooking zones are off.
- you do not set the heat setting after you start the hob.
- you cover a sensor field with an object (a pan, a cloth, etc.) for longer than 10 seconds. The sound operates until you remove the object.
- the hob gets too hot (e.g. when a saucepan boils dry). Before you use the hob again, the cooking zone must be cool.
- you use incorrect cookware. **F** comes on and after 2 minutes the cooking zone stops automatically.
- you do not stop a cooking zone or change the heat setting. After some time **-** comes on and the hob stops. See the table.

Automatic Switch Off times


Heat setting	0 - 3	4 - 6	7 - 8	9 - 14
Stops after	6 hours	5 hours	4 hours	1.5 hours

The heat setting

Touch the control bar at the necessary heat setting. Change to the left or the right, if it is necessary. Do not release before you have a correct heat setting. The display shows the heat setting.

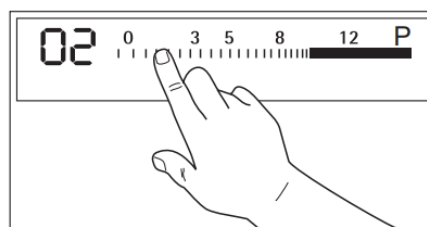

Automatic Heat Up

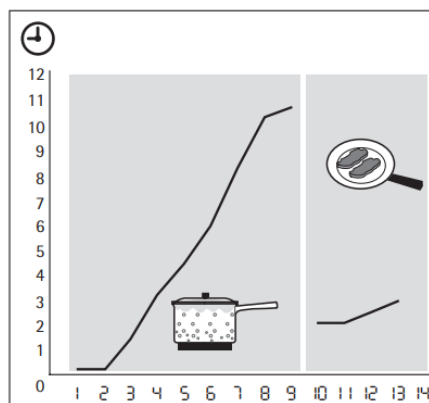

You can get a necessary heat setting in a shorter time if you activate the Automatic Heat Up function. This function sets the highest heat setting for some time (see the graphic), and then decreases to the necessary heat setting.

To start the Automatic Heat Up function for a cooking zone:

1. Touch **P** (**P** comes on in the display).

Induction Hob

2. Immediately touch the necessary heat setting. After 3 seconds **P** comes on in the display.


To stop the function change the heat setting.

Switching on and off the power function

The power function gives more power to an induction cooking zone for no longer than 10 minutes. After that time, the induction cooking zone automatically sets back to **P4**. To start it, touch **P** and **P** comes on. To stop it, set a heat setting between **1** and **P4**.

Power management

The power management divides the power between two cooking zones in a pair (see the figure). The power function increases the power to the maximum level for one cooking zone in the pair and automatically decreases in the second cooking zone to a lower power level. The display for the reduced zone alternates.

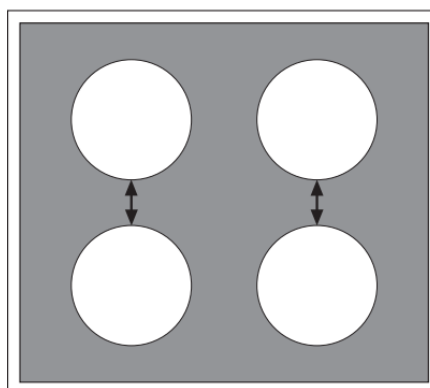

Using the Timer

Count Down Timer

Use the Count Down Timer to set how long the cooking zone operates for one cooking session.

Set the Count Down Timer after the selection of the cooking zone.

You can set the heat setting before or after you set the timer.

- **Selection of the cooking zone:** touch **⏻** again and again until the indicator of a necessary cooking zone comes on.
- **Starting the Count Down Timer:** touch **+** of the timer to set the time (**00 - 99** minutes). When the indicator of the cooking zone flashes slower, the time counts down.
- **Checking the remaining time:** select the cooking zone with **⏻**. The indicator of the cooking zone flashes faster. Display shows the remaining time.
- **Changing the Count Down Timer:** select the cooking zone with **⏻** touch **+** or **-**.
- **Stopping the timer:** select the cooking zone with **⏻**. Touch **-**. The remaining time counts backwards to **00**. The indicator of the cooking zone goes out. To switch off You can also touch **+** and **-** at the same time.

When the time elapses, the sound operates and **00** flashes. The cooking zone switches off.

- **Stopping the sound:** touch **⏻**

CountUp Timer (Count up timer)

Use the CountUp Timer to monitor how long the cooking zone operates.

- **Selection of the cooking zone (if more than 1 cooking zone operate):** touch  again and again until the indicator of a necessary cooking zone comes on.
- **Starting the CountUp Timer:** touch  of the timer UP comes on. When the indicator of the cooking zone flashes slower, the time counts up, display switches between UP and time elapsed (minutes)
- **Checking the elapsed time:** select the cooking zone with . The indicator of the cooking zone flashes faster. Display shows the elapsed time.
- **Stopping the CountUp Timer:** select the cooking zone with  and touch  or  to switch off the timer. The indicator of the cooking zone goes out.

Minute Minder

You can use the timer as a **Minute Minder** while cooking zones do not operate. Touch . Touch  or  of the timer to select the time. When the time elapses, the sound operates and  flashes.

Starting the STOP+GO

The  function sets all cooking zones that operate to a keep warm setting.

- **Touch  to start** this function. The symbol  comes on.
 - **Touch  to stop** this function. The heat setting that you set before comes on.
-  does not stop the timer function.
-  fully locks the control panel but not the sensor field .

Locking / unlocking the control panel

You can lock the control panel, but not . You can stop the appliance.

Touch the symbol . The symbol  comes on for 4 seconds.

The Timer still operates.

Touch the symbol  to switch off this function. The heat setting that you set before comes on.

When you switch off the appliance, you also switch off this function.

The child safety device

This function prevents an accidental operation of the hob.

Starting the child safety device

- Start the hob with . **Do not set the heat settings**.
- Touch  for 4 seconds. The symbol  comes on.
- Stop the hob with .

Switching off the child safety device

- Start the hob with . **Do not set the heat settings**. Touch  for 4 seconds. The symbol  comes on.
- Stop the hob with .

Overriding the child safety device for one cooking session

- Start the hob with . The symbol  comes on.
- Touch  for 4 seconds. **Set the heat setting in less than 10 seconds.** You can operate the hob.
- When you stop the hob with , the child safety device operates again.