


Bosch Washer Dryer


Familiarising yourself with your appliance **en**

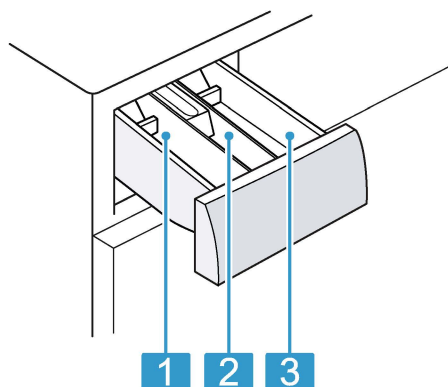

- | | |
|---|---|
| 1 | Dispenser II: detergent for the main wash |
| 2 | Compartment ⌘: Fabric softener |
| 3 | Compartment I: Detergent for prewash |

6.3 Control panel


You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.

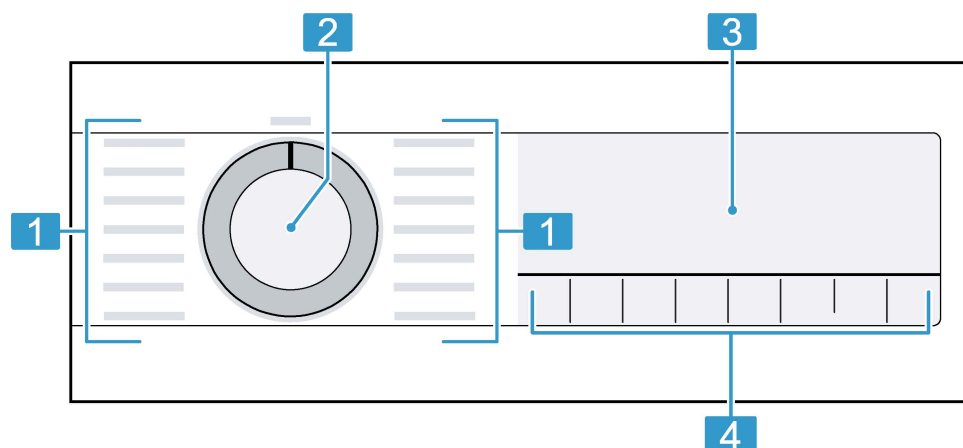

- | | |
|---|--|
| 1 | Programmes → <i>Page 24</i> |
| 2 | Programme selector
→ <i>Page 29</i> |
| 3 | Display → <i>Page 20</i> |
| 4 | Buttons → <i>Page 22</i> |

7 Display

The display shows the current settings, options or relevant information.

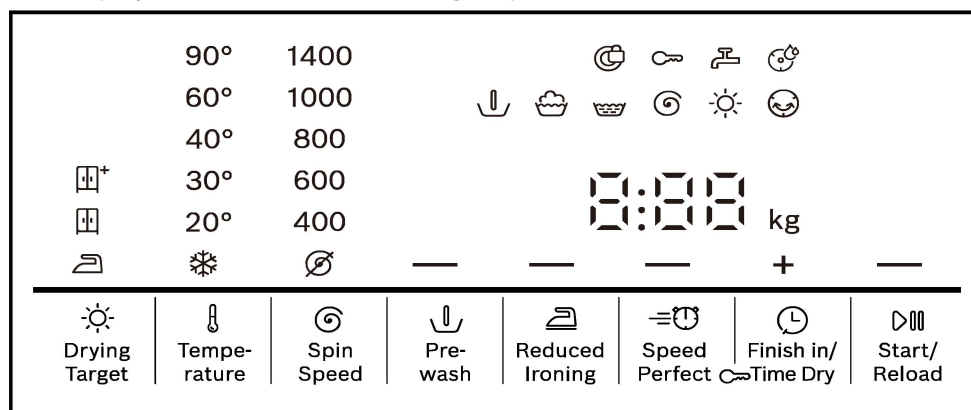

Example: Display

Display	Description
0:40 ¹	Expected programme duration or programme time remaining in hours and minutes.
+8h ¹	Program end time → "Buttons", Page 22
5.0 ¹	Recommendation for the maximum load capacity for the selected program in kg.
Ø - 1400	Set spin speed in rpm. → "Buttons", Page 22 Ø: No spin cycle, draining only
* - 90	Set temperature in °C. → "Buttons", Page 22 * (cold)
—	Start, cancel or pause ■ Lights up: The programme is running and can be cancelled or paused. ■ Flashes: The programme can be started or continued.
↓	Programme status: Pretreatment
🪣	Programme status: Washing
🌊	Programme status: Rinsing
🌀	Programme status: Spinning
End	Programme status: Programme end
¹ Example	

Display	Description
	Programme status: Drying
	Programme status: Crease-reduction function
	■ Lights up: The childproof lock is activated. ■ Flashes: The childproof lock is activated and the appliance has been operated. → "Deactivating the childproof lock", Page 31
	The crease-reduction function is activated. → "Buttons", Page 22
	Prewash is activated. → "Buttons", Page 22
	Shortened programme length is activated. → "Buttons", Page 22
	The dryness level is activated.
	The dryness level is activated.
	The dryness level is activated.
	Flashes: Drum cleaning is required. Run the Cottons  90°C programme for cleaning and caring for the drum and the outer tub. → "Cleaning the drum", Page 32
	■ Lights up: The door is locked and cannot be opened. ■ Flashes: The door is not closed properly. ■ Off: The door is unlocked and can be opened.
	■ No water pressure. → "E:30 / -10,  or H:95 and End.", Page 38 ■ The water pressure from the tap is too low.
E:35 / -10 ¹	Error code, error display, signal. → "Troubleshooting", Page 37
¹ Example	

8 Buttons

The selection of programme settings depends on the programme that is set.

Button	Selection	Description
Temperature	- 90	Adjust the temperature. Set temperature in °C.
Spin Speed	- 1400	Adjust the spin speed or deactivate the spin cycle. Set spin speed in rpm. If is selected, the water is drained and the spin cycle is deactivated. The laundry stays wet inside the drum.
Start/Re-load	■ Start ■ Cancel ■ Pause	Start, cancel or pause the programme.
Finish in/Time Dry	Up to 24 hours	Set the programme end time. The programme duration is already included in the set number of hours. Once the programme has started, the programme duration is displayed.
Spin Speed	Multiple selection	→ "Basic settings", Page 32
Speed Perfect	■ Activate ■ Deactivate	Activate or deactivate a shorter programme duration. Note: Energy consumption increases. The washing result is not affected by this.
Prewash	■ Activate ■ Deactivate	Activate or deactivate prewash, e.g. for washing heavily soiled laundry. Note: Add the detergent for the prewash in compartment I and the detergent for the main wash in compartment II of the detergent drawer. → "Detergent drawer", Page 18
Reduced Ironing	■ Activate ■ Deactivate	Activate or deactivate the reduced creasing programme. In order to reduce creasing in the laundry, the spin cycle and the spin speed are adapted. Note: The laundry has a higher residual moisture after washing. To reduce creasing, hang up the laundry immediately after washing.

Button	Selection	Description
 Speed Perfect and  Finish in/Time Dry	■ Activate ■ Deactivate	→ "Childproof lock", Page 31
 Drying Target	■  Drying Target ■  ■  ■ 	■ When  Drying Target is selected, drying is activated after washing. ■ When ,  or  is selected, the dryness level is activated. → Page 31 Note: For the adjustable combinations of washing, drying or washing and drying, observe the information for the selected programme. → Page 24